

36-INCH LED BLACKLIGHT INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using this 36-INCH Blacklight Fixture.

DANGER - To reduce the risk of electric shock:

Always unplug this fixture from the electrical outlet before cleaning.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this fixture is used by or near children, invalids, or disabled persons.
3. Use this fixture only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
4. Never operate this fixture if it has a damaged cord, plug, or tube; nor, if it is not working properly, has been dropped or damaged, or exposed to water. Return the fixture to the manufacturer for examination and repair.
5. Keep the cord away from heated surfaces and walkways.
6. Never drop or insert any object into any opening.
7. Do not use outdoors.
8. Do not operate where flammable aerosol (spray) products are being used or where oxygen is being administered.
9. To disconnect, turn all controls to the off position, then remove the plug from the outlet.

SAVE THESE INSTRUCTIONS

CAUTION:

To reduce the risk of electric shock, this fixture has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Never use with an extension cord unless plug can be fully inserted. Do not change the plug in any way.

VOLTAGE INPUT: 90V – 265V – 60Hz
FOR HOUSEHOLD / RESIDENTIAL USE ONLY

SET-UP INSTRUCTIONS:

1. Carefully remove the fixture, cords, and mounting hardware.
2. Insert the female end of the power cord into one end of the fixture.
3. Plug the male end of the power cord into a wall outlet and turn the rocker switch to the ON position.
4. If the tube does not light, turn the fixture off and then rotate the tube about 1/4 turn to lock into position.
5. For mounting, screw the mounting clips to the mounting surface evenly spaced apart in a straight line. Turn the fixture off and unplug. Insert the fixture into the clips.
6. To link another fixture, be sure all fixtures are off and unplugged. Insert the linking connector into one fixture and then attach the link cord to the connector and the opposite end of the cord to the other fixture. Mount the fixtures and then plug in the main powered fixture and turn the rocker switch to the on position.
7. Link up to 10 fixtures.