



Wired Timer Controller (FC-t)

1. Plug in the fog machine to power and turn the power switch to the fixture on.
2. Plug in the timer remote to the Manual Controller socket on the rear of the fog machine.
3. Press the TIMER ON/OFF button on the timer remote. The LED above the button should light, indicating activation of function.
4. You may now set the INTERVAL & DURATION adjustment knobs to the desired position.

Note: The INTERVAL is the time in between bursts of fog.

Note: The DURATION is the time that the fog machine will run during the burst.

